










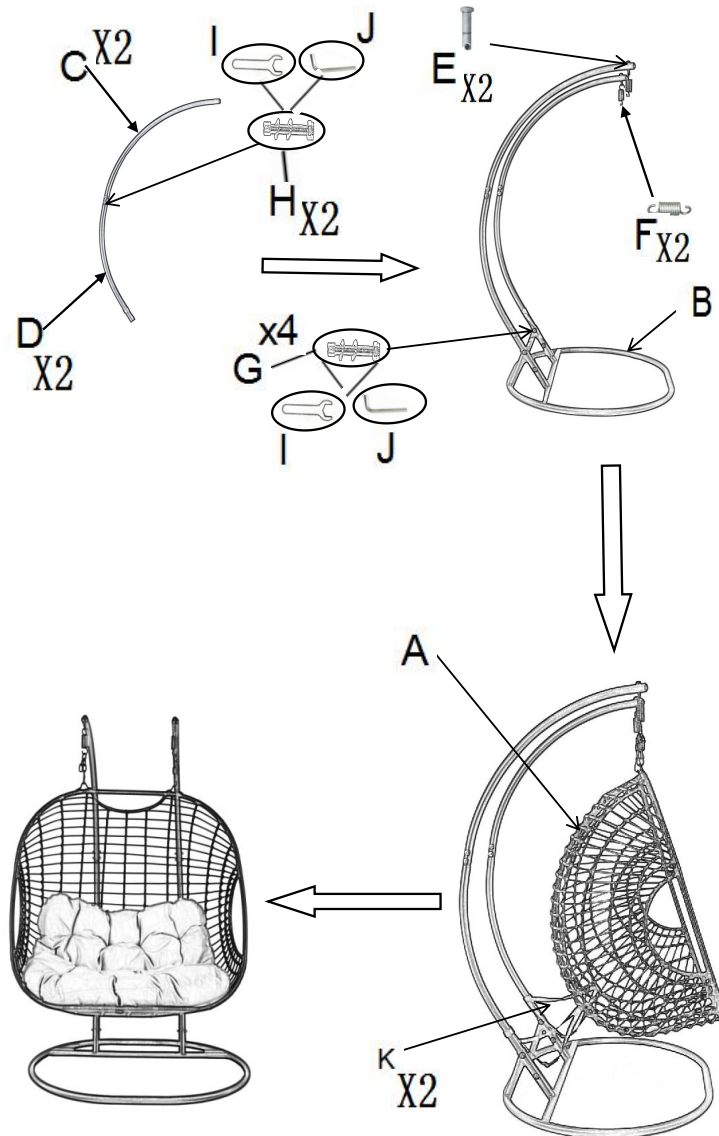


IMPORTANT: READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE

Assembly Instructions

A		1PC
B		1PC
C		2PC
D		2PCS
E		2PCS
F		2PCS
G	 M10*60	4 PCS
H	 M10*55	4 PCS
I		1 PC
J		1 PC
K		2 PC



IMPORTANT & WARNINGS:

- . Remove all parts from packaging carefully.
- . This is a heavy unit!! When assembling and un assembling we recommend that 2 or more adults are involved.
- . Keep children & Pets away when assembling or un assembling.
- . Do not climb on the frame
- . This product is not a toy and should NOT be used as a swing under any circumstances as this could result in injury.
- . Max recommended weight is 240Kgs/ 500Lbs.
- . This product is only designed to seat 2 person at any given time. DO NOT exceed this as this could damage the product and cause injury; and void your warranty.
- . Keep all flame and heat sources well away from this product at all times.
- . Take care not to trap fingers whilst assembling and un assembling.
- . When not in use please store away in a cool and dry place away from any heat source.