

# VENTURE DESIGN

## HOME & INTERIOR



1213-6010

Cane Sun Lounger


Monteringsanvisning - Assemblyinstruction - Einbauzeichnung



Step 1

Steg 1

Schritt 1

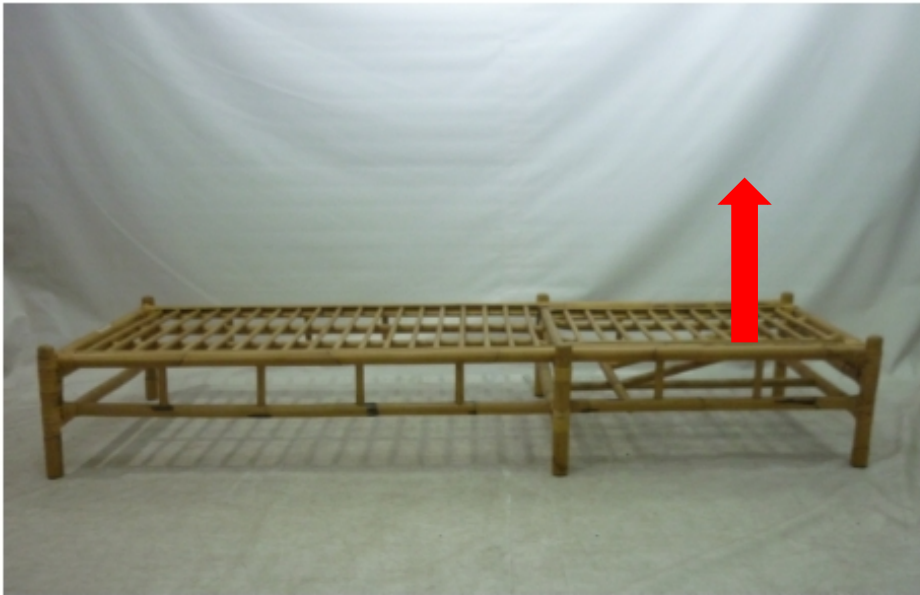

Step 2

Steg 2

Schritt 1

